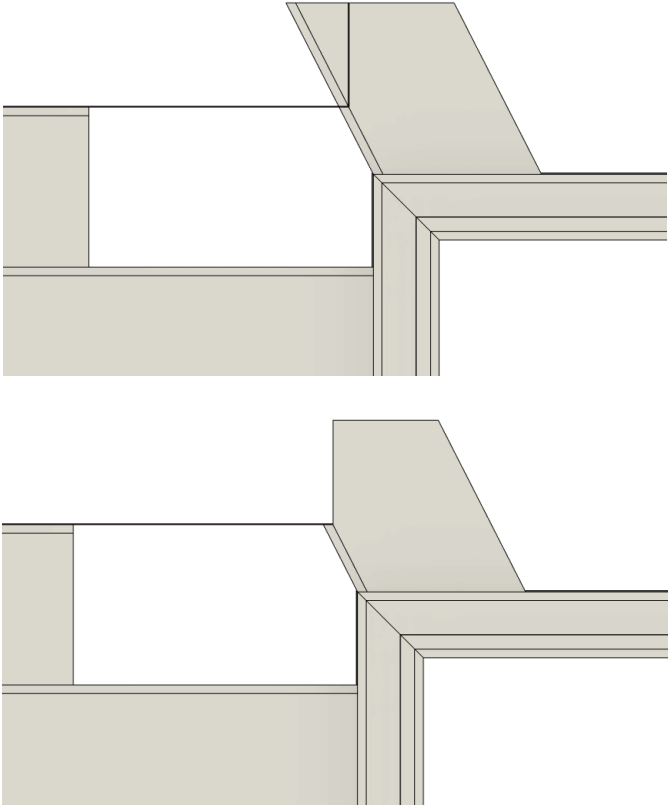
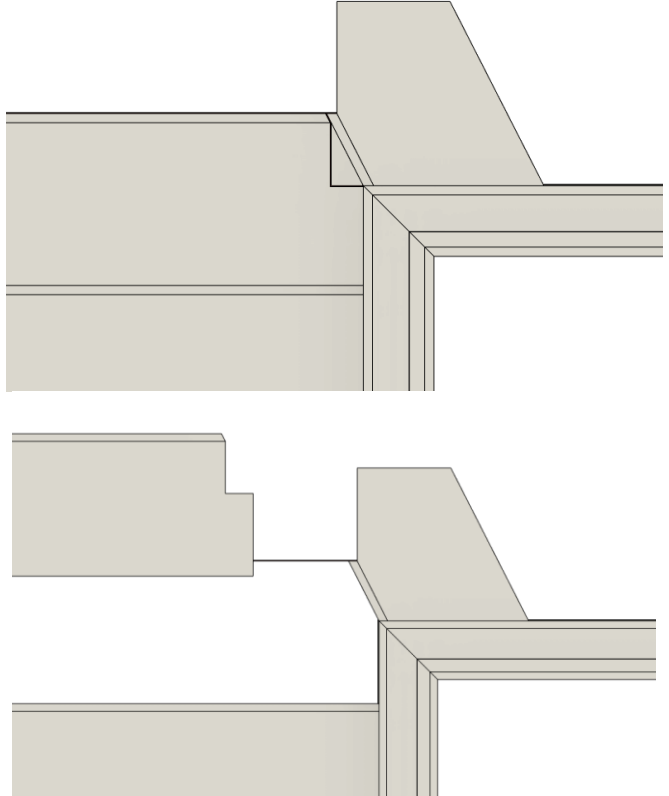


Assembly sequence

<p>8</p>	<p>Align the outer part of the 'groove plate over window' to the side of the window frame, transfer the horizontal marking of the side groove plate to the groove base and draw a vertical line upwards, then cut to size at the marking</p>	
<p>9</p>	<p>Lift the cut panel slightly and slide the side groove plate underneath it, mark the cut-out as shown, Cut the panel to size</p>	

Assembly sequence

<p>10</p>	<p>Transfer the groove bottom edge of the side groove plate to the outer plate, remove the side groove plate, position the triangular plate of the 'groove plate over window' and transfer the vertical cut edge, cut the triangular plate to size</p>	
<p>11</p>	<p>Fasten previously cut grooved panels to fit,</p>	
<p>12</p>	<p>Position the centre panel of the 'groove panel over window', transfer the centre of the window frame to the panel and cut to size, do not fix the panel yet</p>	